

Mass Casualty Ventilator

Models: MCV100 & MCV100-B

Electrically Controlled Ventilator



St. Louis, MO 63110

Phone 314-771-2400

S168-560-001

Rev. B

Table of Contents:

Section	Description	Page
1	Product Description	3
2	Explanation of Warnings	3
3	Explanation of Abbreviations	4
4	Symbols	4
5	Specifications	5-6
6	Features	7
7	Operating the MCV100(-B)	8-11
8	Alarms	11-12
9	Power Connections	13
10	Battery Charging	13-14
11	Cleaning	14
12	Check Out Procedure	14-15
13	Maintenance	16-18
14	Accessories and Replacement Parts	20-21
15	Oxygen Cylinder Depletion Times	22
16	Table: Vt, flow, I:E Ratios, Approximate Vt Setting based on Height	23
17	Warranty	23
18	Applicable Standards	24

Models:

MVC100

Mass Casualty Ventilator Basic Model

MCV100-B

Mass Casualty Ventilator with O2 Blender

CAUTION: Federal law restricts this device to sale by or on the order of a physician.

CAUTION: The Mass Casualty Ventilator should not be used on children with a weight of 20 kg (44 lbs) or less.

Each MCV100 (-B) includes the following:

- 1 Ventilator
- 1 Patient Circuit
- 1 Power Cord
- 1 Oxygen Hose
- 2 Straps, Velcro
- 1 Instruction Manual

1. **Product Description:**

The Mass Casualty Ventilator (MCV100 & MCV100-B) is an electrically controlled, portable emergency ventilator, which is designed to provide emergency respiratory support by means of a face mask or tube inserted into a patient's airway. The MCV100 & MCV100-B delivers a time cycled constant flow breath. The inspiratory time is variable depending on the tidal volume selected. The breath volume is varied by changing the inspiratory time and the flow rate delivered to the patient. Various breaths per minute are achieved by varying the expiratory time. The MCV100 & MCV100-B can deliver breaths to the patient using internal compressors as well as an external high pressure gas source.

The MCV100 & MCV100-B are intended for use on patients weighing greater than 20kg (44 lbs.). This ventilator is intended to be used in the environments associated with emergency medical services (EMS), inter-hospital transport and hospital facility usage. The ventilator is intended to be used in temperatures of -18°C to 50°C (0°F to 122°F) and 5% to 95% RH non-condensing. The MCV100 & MCV100-B are intended to be used on one patient at a time. The unit can be reused after it has been cleaned and the single use patient circuit has been replaced.

Biocompatibility testing has proven this unit safe for periods up to 14 days of continuous use. Results beyond this time are not known.

	Warning: The MCV100 & MCV100-B are not MRI compatible.
Caution:	Federal law restricts this device to sale by or on the order of a physician.
Caution:	The MCV100 & MCV100-B should not be used on children with a weight of 20kg (44 lbs) or less.

2. **Explanation of Warnings:**

 
 Warning:	Potential injury to the patient exists.
Caution:	Potential damage to the ventilator, breathing circuit or other equipment may result.

Warnings and cautions should be read and understood before operating the Autovent.

3. Explanation of Abbreviations:

T _v	Tidal Volume
BPM	Breaths per Minute
I _t	Inspiratory Time
Psi	Pounds per Square Inch
cm H ₂ O	Centimeters of Water
kpa	Kilopascal
ml	Milliliters
LPM	Liters per minute
mm	Millimeters
LED	Light emitting diode
CPR	Cardio Pulmonary Resuscitation
LPA	Low pressure alarm
HPA	High pressure alarm
RH	Relative Humidity

4. Symbols:

	Degree of protection against electric shock: Type BF
	Caution, Consult accompanying documents
	% Relative Humidity: 5 to 95% Non-Condensing
	Temperature Range: 0°F to 122°F Operating -40°F to 140°F Storage
	On/Off

5. **Specifications:**

A. **Gas Supply Pressure:** 280 kPa (40.6 psi) to 600 kPa (87.0 psi) Oxygen DISS.

B. **Breaths per Minute (BPM):** Range: 8 to 20, Accuracy: $\pm 10\%$

C. **Tidal Volume (Tv):** Range: 200ml to 1200ml
Accuracy: $\pm 10\%$ with 100% Oxygen or 100% Air, $\pm 12\%$ blended model(-B)

D. **Inspiratory Time (I_t):**

Varies with tidal volume setting, the following table gives approximate inspiratory times:

Tidal Volume (ml)	Inspiratory Time (Seconds)
200	1.0
300	1.1
400	1.2
500	1.3
600	1.4
700	1.5
800	1.6
900	1.7
1000	1.8
1100	1.9
1200	2.0

E. **Safety Pressure Relief:** Adjustable from 5 cmH₂O to a maximum between 60 and 80 cmH₂O. The 60 cm H₂O mark indicates the airway pressure will not exceed 60 cm H₂O regardless of tidal volume setting.

F. **Low Source Gas Alarm:** Activates at 275 to 248kPa (40 to 36 psi) source pressure.

G. **Electronic Alarms:**

High Airway Pressure Alarm Range 15 to 80 cm H₂O

High Airway Pressure Alarm Accuracy $\pm 5\%$

Low Airway Pressure Alarm Range 0 to 30 cm H₂O

Low Airway Pressure Alarm Accuracy $\pm 5\%$

Alarm Sound Level is greater than 60 decibels

H. **Battery Life:** Run time at room temperature 21°C (70 $\pm$ 5°F), BPM=10, and Tidal Volume=600ml.

a. 100% O₂: 20 hours (Approx 10 hours at 0°F (-18°C))

b. 60% O₂: 20 hours (MCV100-B only) (Approx 10 hours at 0°F (-18°C))

c. 100% AIR: 7 hours (Approx 4 hours at 0°F (-18°C))

I. **Oxygen Inlet Filter:** 65 Micron sintered bronze.

J. **Burst Pressure:** 145 psig (1000kPa) minimum through oxygen inlet.

K. **Leakage:** The unit shall be designed so that oxygen is not allowed to leak through any seals or fittings.

L. **Gauge:** 0-99 cm H₂O (0 – 9.8 kPa) accuracy $\pm 5\%$

M. **Inspiratory and Expiratory Resistance:** 5 cm H₂O (.5kPa) maximum

N. **Inadvertent PEEP:** ≤ 2 cm H₂O


O. **Inadvertent Continuing Expiratory Pressure:** ≤ 2 cm H₂O

P. **Dead Space:** $\leq 5.5\%$ of minimum tidal volume

- Q. Peak Inspiratory Flow:** 100 LPM for 2 seconds
- R. Spontaneous Breath:** Initiated at -2 cm H₂O maximum
- S. Manual Breath:** Delivers one set tidal volume
- T. Oxygen Blending:** 60% ±12% oxygen with bender.
- U. Weight:** 6.3 kg (14.0 lbs)
- V. Size:** 88.9 x 261.1 x 292.1 mm (3.5 x 10.3 x 11.5 inches)
- W. Operating Conditions:** -18°C to 50°C (0°F to 122°F)
5% to 95 % non-condensing relative humidity
- X. Storage Conditions:** -40 to 60°C (-40 to 140°F)
5% to 95 % non-condensing relative humidity
- Y. Shipping Conditions:** -40 to 60°C (-40 to 140°F)
5% to 95% non-condensing relative humidity
- Z. Electrical Rating:**
Operating Voltage: 12 volts DC 5.0 amp current draw at 12 volts
Input Voltage: 110 to 240 volts AC, 50 to 60 HZ 2 Amps max current draw.
Replacement Fuses 2 amp 250 volt rating
- AA. Connections:** CGA V5 O₂ DISS Input
ISO 5356 22 mm Output

Latex Free: This product does not contain latex.

6. Features:

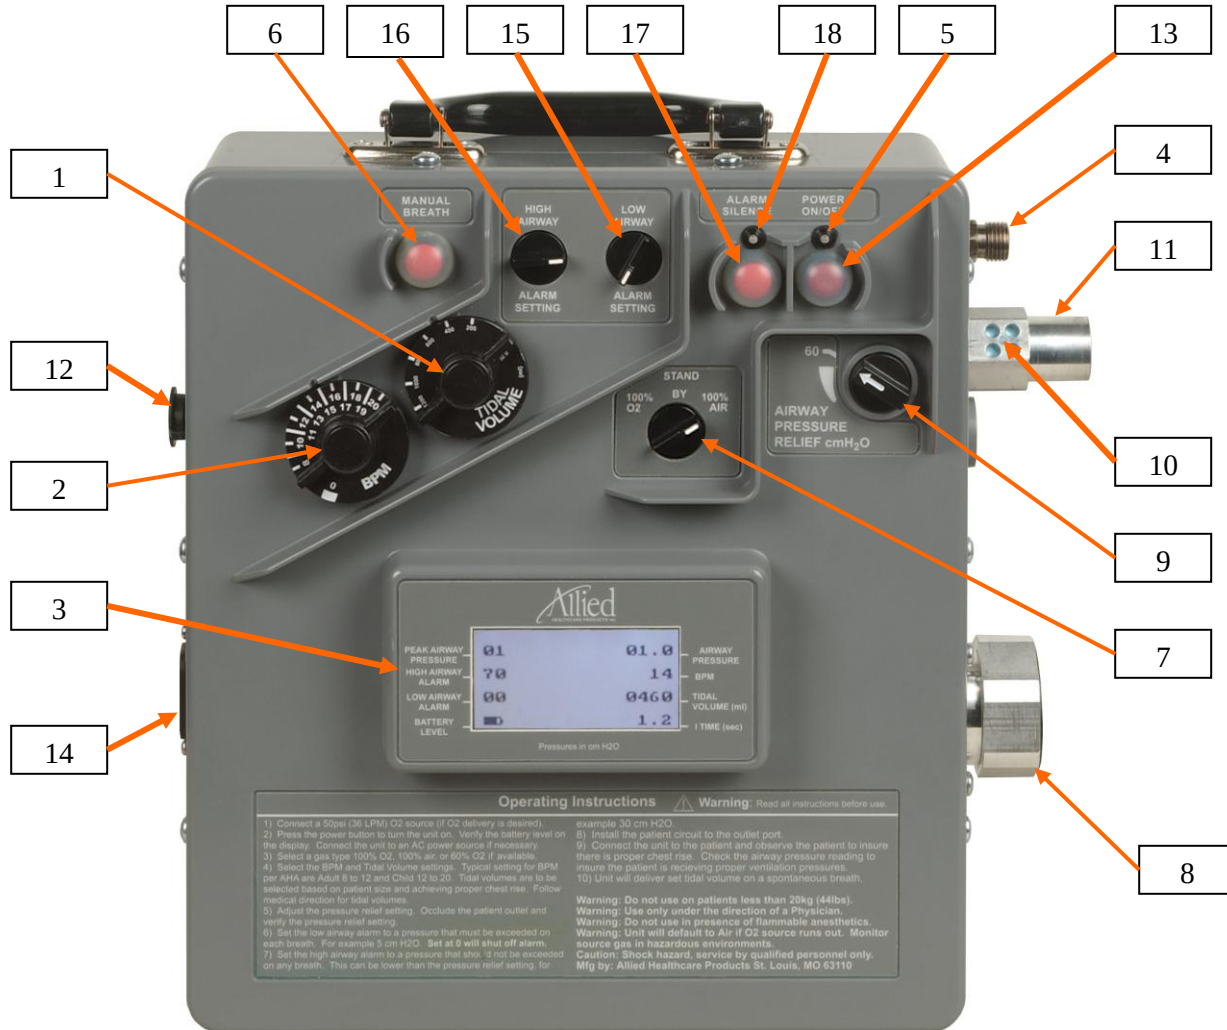

Item #	Description	Item #	Description
1	Tidal Volume Control	10	Anti-Suffocation Valve
2	BPM Control	11	Patient Circuit Connection
3	LCD Display	12	Auxiliary 12V Power Inlet
4	Oxygen Connection	13	Power On/Off
5	Power On/Low Battery LED	14	AC Power Inlet
6	Manual Breath Button	15	Low Airway Pressure Alarm Adjustment
7	O2 concentration selector	16	High Airway Pressure Alarm Adjustment
8	Air Inlet/NBR Filter Connection	17	Alarm Silence Button
9	Adjustable Airway Pressure Relief Control	18	Alarm LED Indicator

7. Operating the MCV100(-B):

	Warning: This device should only be operated by qualified personnel under approved medical direction.
	Warning: Use only as directed. Improper usage or unauthorized modification of this product may result in user or patient injury.

The MCV100(-B) is intended to be used as an electrically powered emergency ventilator, which is designed to provide emergency respiratory support by means of a face mask or tube inserted into the patient's airway. The ventilator is intended for use on patients weighing greater than 20kg (44lbs). The ventilator is intended to be used in temperatures of -18°C to 50°C (0°F to 122°F) and 5% to 95% RH non-condensing.

Prior to use, first read and understand the instruction manual, charge the battery and then follow the check out procedure in Section 12.

- **Connecting to an Oxygen Source:**

Located on the right side of the MCV100 is a diameter index safety system (DISS) fitting. Connect a 50 psi oxygen source with a minimum of 40 LPM flow capacity to this fitting.



	Warning: Proper tidal volumes may not be provided with a gas source not meeting the specified requirements on page 4.
	Warning: This device operates with medical gases under pressure, including oxygen. Do not use this device while smoking or near open flames. Do not use on this device or operate near flammable materials.
	Warning: Do not use on this device in the presence of flammable anesthetics.
	Warning: Verify that there are no noticeable leaks after connection to the 50 PSI O2 source.
	Caution: In order to provide optimal performance, check all gas supplies to assure only medical grade gas is used.

The gas source may also be a high flow air/oxygen blender meeting the flow and pressure requirements. Use only the 100% oxygen setting on the MCV100, if using an external blender. This will ensure that the gas delivered from the ventilator has the same oxygen concentration as the gas delivered to it by the external blender.

- **Connecting the patient breathing circuit:**

Located on the right side of the unit is a 22mm connection for a patient breathing circuit. Install the corrugated tubing over the connector so that it on securely. The tubing will not pull off easily when properly installed.



Warning: Do not use unapproved patient circuits as loss of performance may result.



Anti-Suffocation valve
do not occlude!



Warning: Do not occlude the anti-suffocation valve. This will prevent the patient from getting outside air if spontaneously breathing.

- **Select the desired Breaths per Minute BPM:**

The MCV100 has a BPM range of 8 to 20 with an inspiratory time that automatically varies with the tidal volume setting. The American Heart Association Guidelines 2005 recommend a BPM rate of 8 to 12 for an adult and 12 to 20 for a child. These are recommendations and you should always follow your physicians or medical directors' instructions.

- **Select the desired Tidal Volume:**

The MCV100 provides a Tidal Volume range of 200 – 1200ml. The inspiratory time will vary with tidal volume and is shown on the LCD display.

- **Select the desired Gas Mixture:**

Turn the gas selection knob to the desired gas selection. On the base model you will need to select 100% oxygen or air. On models equipped with a blender (MCV100-B) you can select 100% oxygen, a 60% Oxygen or air as the gas supply. On the 60% oxygen setting the ventilator uses a venturi blending system to mix ambient air with the medical oxygen source. The air setting draws in outside air and delivers it to the patient by the use of internal compressors. Let the unit cycle 3 times before connecting it to the patient to insure proper breaths are being delivered.



Warning: Do not use the Air or 60% Air/Oxygen mixture in areas where the ambient air is not safe for breathing.

- **Verify the Pressure Relief Setting:**

This unit has an adjustable pressure relief range with a marked setting of 60 cm H₂O. At this setting, the airway pressure will not exceed 60 cm H₂O regardless of vent settings. Adjustment above or below this marked setting will result in a corresponding higher or lower maximum airway pressure. The pressure relief setting will vary slightly with tidal volume setting. Always verify the pressure relief pressure after the vent settings have been selected. To check the actual relief pressure, block the end of the ventilator breathing circuit and observe the airway pressure reading on the LCD display. This will be the maximum airway pressure. You should hear an audible alarm as this maximum pressure is reached.



Warning: Preset tidal volumes may not be delivered when the maximum pressure limit is reached. Inspiratory times will remain constant, however no additional tidal volume will be delivered after the pressure limit is reached.

- **Connect the patient breathing circuit to the patient:**

The patient breathing circuit has been designed to fit with an oxygen mask (22mm outside diameter) or endotracheal tube (15mm inside diameter). Follow the established guidelines for maintaining the patient's airway.

- **Verify the patient is receiving good ventilation:**

Once the patient is connected to the ventilator the patient should be observed to make sure they have adequate chest rise and fall. The chest rise should be even and should return to a normal position. If the patient does not have adequate chest rise check the tidal volume setting, patient connections and examine the patient for a possible obstruction of the airway or other injury. The patient should be monitored to make sure they are receiving proper ventilation.

The airway pressure LCD display should be observed to make sure the patient is receiving adequate positive pressure ventilation. If the LCD display reading is low during the delivery of a breath and the chest rise is also low, check the tidal volume setting, patient connections and examine the patient for a possible obstruction of the airway or other injury. The LCD display reading should also be observed to make sure it is not too high. Common numbers used in practice are a maximum of 20 cm H₂O for an unprotected airway and 30 cm H₂O for a protected airway. Higher pressures may be required based on the patient's condition and you should always follow the physician's instructions. A high reading with pressure limit alarm may indicate a blocked airway or a stiff lung.

- **Spontaneous Breathing by the Patient:**

Should the patient begin to breathe spontaneously the MCV100 will sense this breath and deliver the set tidal volume at the corresponding inspiratory time. The breath timing will be reset based on the selected BPM rate. For example, if 10 BPM was selected the next breath will be delivered 6 seconds after the start of the spontaneous breath.

The gas flow rate to the patient during a spontaneous breath is based on the tidal volume selection as shown in the following table. Should the patient demand exceed the gas flow rate, the additional demand will be supplied by ambient air. Ambient air is pulled in through an anti-suffocation valve located in the breathing circuit connection fitting.

Tidal Volume Setting (ml)	Approx. Flow (LPM)
200	12
400	20
600	25.7
800	30
1000	33.3
1200	36



Warning: Do not occlude the anti-suffocation valve. This will prevent the patient from getting outside air if demand during spontaneous breathing exceeds unit output.

- **Manual Breaths:**

Manual breaths may be delivered using the manual breath button. Each time this button is pushed the ventilator will deliver one breath with the set tidal volume. This button can be used to deliver breaths during CPR. The unit will deliver only one breath per the ventilator settings when the button is pushed. The button must be released and pushed again to deliver a second breath. The ventilator breath timing is reset when the button is pushed.

8. Alarms:

The pneumatic pressure relief alarm is an audible alarm that is actuated when the safety pressure relief setting is reached. This pneumatic alarm indicates that the airway pressure has exceeded the maximum pressure relief setting and that gas has been released to prevent the pressure from reaching levels above this setting.



Warning: Preset tidal volumes may not be delivered when the maximum pressure limit is reached. Inspiratory times will remain constant, however no additional tidal volume will be delivered after the pressure limit is reached.

The electronic alarms will give an audible and visual alert for the following occurrences:

- Low Source Gas
- High Airway Pressure
- Low Airway Pressure

The low source gas alarm is an audible (intermittent tone) and visual alarm that activates when the source gas pressure drops below 40 to 38 psi. This is an indication that the unit will stop functioning soon and may not be delivering proper tidal volumes. The alarm will clear when proper source gas pressure is restored for a minimum of 10 seconds. See low source gas alarm in section 6 for more information.




Warning: Preset tidal volumes may not be delivered when the low source gas pressure is reached.

The high airway pressure alarm is an adjustable alarm that will activate if the pressure exceeds the selected pressure. This alarm operates independently from the pneumatic pressure relief alarm. This alarm can be set at a pressure from 15 to 80 cm H₂O. This alarm may be used to monitor a change in the patient's condition such as fluid collecting in the lungs or a partial obstruction of the airway. This alarm is automatically cleared when 12 seconds pass without a high airway pressure being detected. When activated, the alarm LED will blink red, the audible alarm will sound in a continuous tone, and the High Airway Alarm setting on the LCD display will blink.

The low airway pressure alarm is an adjustable alarm that will activate if the airway pressure does not exceed a minimum value. This alarm can be set at a pressure from 0 to 30 cm H₂O. This alarm may be used to indicate a potentially insufficient tidal volume or a patient disconnect. The airway pressure must exceed the low pressure set point at least once every 15 seconds. The alarm will clear when the airway pressure goes above the set point. When activated, the alarm LED will blink red, the audible alarm will sound in an intermittent tone or "beep", and the Low Airway Alarm setting on the LCD display will blink.

Alarm Silence Button – When there is an alarm the user may press the silence button. This will turn off the buzzer for 110 seconds as long as there are no other alarms. Pressing this button will not clear the alarm LED's.

The low battery alarm is indicated by the Power On/ Low Battery LED. The Power On/ Low Battery LED will light green when the unit is turned on and the battery level is good. When the battery becomes partially discharged, this LED will change from green to red. When the battery is critically low, this LED will flash red indicating the ventilator may stop functioning soon. When the low battery indicator is present the unit needs to be plugged in for recharging the internal battery or may be connected to an auxiliary 12 volt power supply. Battery level is also indicated on the LED display.

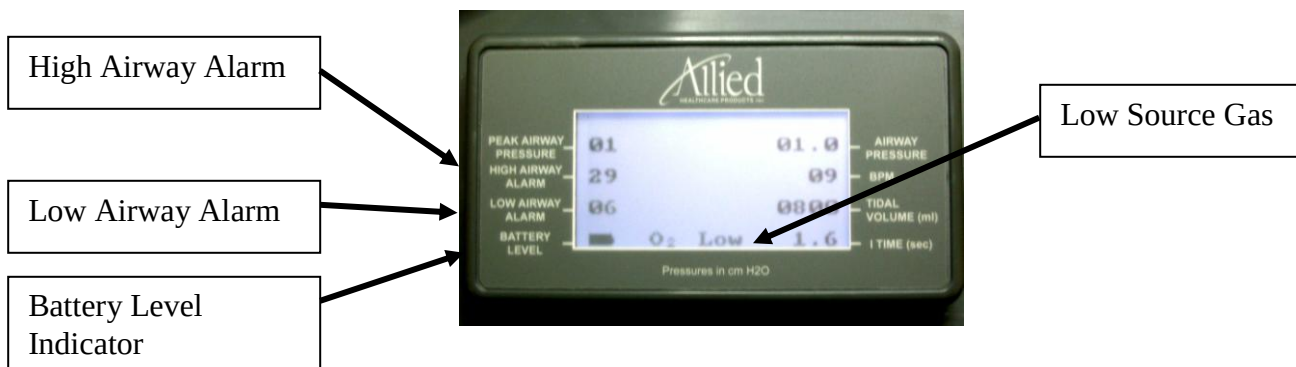

9. Power Connections:



Warning: Grounding reliability can only be achieved when the equipment is connected to a hospital grade receptacle.

AUXILIARY
POWER
CONNECTION



AC POWER
INLET
IEC STYLE

AC Power Inlet and Auxiliary Power Connection

A 110/240 Volt 50/60 Hz AC power source may be connected to the unit using the connector as shown above. The unit has a switching power supply inside it and automatically compensates to cover the full range of voltage and power frequencies. The unit will automatically charge the internal battery when connected to an AC power source. Plugging in the unit during breath delivery may affect the volume of the breath delivered. Plug the unit in between breaths.

Connecting the auxiliary power source is done by first aligning the keyed connector with the keyed inlet on the unit and then inserting the connector into the inlet. Twisting the ring on the connector clockwise will then lock the connector to the unit. To remove the auxiliary power supply, twist the connector counterclockwise and then pull the connector straight out of the socket. Contact manufacturer for information on an approved auxiliary power source.



Warning: The MCV100 unit may reset when connecting or disconnecting the auxiliary power. If this occurs, the MCV100 will quickly and automatically return to normal operation.



Warning: Auxiliary power connection is keyed. Make sure that connectors are properly aligned before insertion, do not force.

10. Battery Charging:

If the internal battery has run down and the unit stops operating, the unit may be connected to AC to restore operation. The unit will charge automatically when connected to an AC power source. The unit will charge the battery only when necessary and can be left plugged in at all times. **To keep the battery at full**

capacity, it is recommended to leave the unit plugged in at all times. If the auxiliary battery is plugged in the unit will only charge the auxiliary battery. The recharge time for the internal battery is less than 5 hours when the unit is off (the recharge time is approximately 10 hours when in use).

11. Cleaning:

The MCV100(-B) should be cleaned after each use. To clean the ventilator, keep the gas supply hose on the unit to prevent contamination of the oxygen circuit.

	Warning: Cleaning procedures should be performed in an environment free of oil and petroleum based products.
---	---

The MCV100 has been designed to be water resistant but the unit cannot be submerged or sprayed down for cleaning.

Wipe the unit down with a damp rag containing a mild cleaning solution to remove any residue from the surface. Once the residue has been removed the unit should be wiped with isopropyl alcohol or a cold disinfecting solution to kill bacteria. The unit should then be wiped down with water to remove any film left by the cold disinfecting solution. Make sure the unit is dry before putting the unit away. The following is a list of tested cleaning solutions:

- | | |
|-----------------------|--|
| 1. Isopropyl Alcohol: | 70% IPA |
| 2. Alconox | 1 Tablespoon Alconox to 1 Gallon H ₂ O |
| 3. Cetylcide: | 2 Tablespoons Cetylcide to 1 Gallon H ₂ O |
| 4. Bleach: | 10% Bleach in H ₂ O |

	Warning: Do not attempt to clean and re-use single patient ventilation circuits as loss of performance may occur.
---	--

Dispose of single patient use items per local biohazard standards.

12. Check Out Procedure for the MCV100 & MCV100-B:

The unit should be checked for proper operation before each use. This can be done after cleaning to prepare the unit for the next use..

Set the ventilator to the following settings:

BPM = 10
Tidal Volume = 800 ml
Gas Type = 100% O₂

General Operation Check:

1. Connect a 50 psi oxygen source to the unit, turn the power on and it should begin to cycle.

2. Using a watch count the number of breaths delivered in 1 minute (60 seconds).
 - a. confirm that between 9 and 11 breaths have been delivered.
 - b. confirm that the inspiratory time is significantly shorter than the expiratory time. (At the settings noted above, ventilator should provide a 1.6 second inspiratory time and a 4.4 second expiratory time.)
3. Set the pressure relief to 60 cm H₂O and occlude the output fitting or vent circuit output by placing your hand over the opening.
 - a. Confirm that the pressure on the gauge does not exceed 60 cm H₂O.
 - b. Confirm that there is an audible squeak from the pressure relief valve, signaling that the pressure relief has actuated.
4. Press and release the manual breath button and confirm that a breath is triggered.

Alarm Mode Check:

Set the low pressure alarm to 10 cm H₂O and the high pressure alarm to 30 cm of H₂O.

1. With the ventilator output open let the vent cycle for 20 seconds
 - a. Confirm that the low pressure alarm sounds and the low pressure indicator is displayed on the LCD screen.
2. Occlude the ventilator output with your hand for 20 seconds
 - a. Confirm that the low pressure alarm has cleared
 - b. Confirm that the high pressure alarm sounds and the high pressure indicator is displayed on the LCD screen.
3. Remove your hand from the ventilator output and let the vent cycle for 10 seconds
 - a. Confirm that the high pressure alarm has cleared.
4. Turn the source gas off and wait for the pressure to drop.
 - a. Confirm that the low gas indicator is displayed on the LCD screen.
 - b. Confirm that the low source gas alarm sounds
5. Visually inspect the anti-suffocation valve in the ventilator outlet fitting to verify that it is laying flat against the inside of the fitting.

Should the unit fail any of the tests contact Allied Healthcare Products, Inc. Service Department at 314-771-2400.

Always store the ventilator in a clean dry place.

13. Maintenance:

The following section provides information on basic maintenance as well as annual maintenance schedules and procedures for stockpiled ventilators. If this ventilator is to be used regularly, we recommend performing the Verification of Calibration and Function annually.

Particle Filter Replacement:

The MCV100(-B) contains a particle filter located inside the air inlet on the side of the unit. This filter cleans the ambient air drawn in by the compressors and also cleans the air used in the function of the blender. This filter should be checked every 4 months and changed if visibly dirty. To replace the filter, remove the protective screen by prying off with a dull flat tool. Once the screen is removed the filter can be removed and replaced.

Battery Maintenance:

The MCV100(-B) battery level should be checked every four months. If not kept on continuous charge, charge the battery at this time. If the battery does not reach full charge within 5 hours, the battery should be replaced at that time. Every three years, the battery in the unit should be replaced. This battery must be disposed of as required by local ordinances.

Comprehensive Maintenance:

Every six years, the unit should be sent to a qualified service center for a comprehensive maintenance.

If problems are noted with this product, contact the Allied Healthcare Products, Inc. technical support center for assistance at 800-411-5136

Maintenance Requirements for Stock Piled MCV100 Ventilators

4 Months: Charge Battery (This 4 month battery charge protocol is only necessary if the ventilator is stored without continuous charging.)

8 Months: Charge Battery

Year 1: Maintenance Check List

Yearly Verification of Calibration and Function	30 MINUTES
Charge Battery	

1 Year 4 Months: Charge Battery

1 Year 8 Months: Charge Battery

Year 2: Maintenance Check List

Yearly Verification of Calibration and Function	30 MINUTES
Charge Battery	

2 Year 4 Months: Charge Battery
2 Year 8 Months: Charge Battery

Year 3: Maintenance Check List

Manufacturer Maintenance • Replace Battery & Charge • Calibrate Unit	Contact the Allied Healthcare Products, Inc. technical support center for assistance at 800-411-5136
--	--

3 Year 4 Months: Charge Battery
3 Year 8 Months: Charge Battery

Year 4: Maintenance Check List

Yearly Verification of Calibration and Function	30 MINUTES
Charge Battery	

4 Year 4 Months: Charge Battery
4 Year 8 Months: Charge Battery

Year 5: Maintenance Check List

Yearly Verification of Calibration and Function	30 MINUTES
Charge Battery	

5 Year 4 Months: Charge Battery
5 Year 8 Months: Charge Battery

Year 6: Comprehensive Maintenance Check List

Manufacturer Maintenance • Replace Seals • Calibrate Unit • Replace Battery	Contact the Allied Healthcare Products, Inc. technical support center for assistance at 800-411-5136
---	--

Yearly Verification of Calibration and Function:

Equipment Required

- Respical RT200 or equivalent ventilator calibrator
- 50 psi regulated Oxygen source
- 110 VAC, 60 Hz
- Power Cord
- Corrugated tubing

Procedure

- Connect the Oxygen source to the MCV100.
- Use the power cord and connect the unit to 110 VAC, 60 Hz power source.
- Connect the corrugated tubing the MCV100 outlet and the Respical high flow inlet
- Set the tidal volume to 200 setting and turn the MCV100 on. Readjust the gas source to 50 psi if necessary.
- Set the gas selection to 100% O₂.
- Adjust the BPM rate per the following table and note acceptable range:

BPM	Acceptable Range
10	9 to 11
12	10.8 to 13.2
18	16.2 to 19.8
20	18 to 22

- Set the BPM to 10 and the Tidal Volumes per the following table:

Tidal Volume	Acceptable Range
200	180 to 220
400	360 to 440
600	540 to 660
800	720 to 880
1200	1080 to 1320

- Set the gas selection to 100% Air. Retest the tidal volumes per the above table.
- Set the gas selector to 60% O₂ (Model MCV100-B only). Retest the tidal volumes per the above table.
- To test the pressure relief, set the selector knob on 60 cm H₂O. Remove the corrugated tubing from the outlet and occlude the outlet fitting with the palm of your hand. The airway pressure should not exceed 60 cm H₂O and the audible alarm should sound.
- To test the high airway pressure alarm, set the alarm to 40 cm H₂O. The alarm LED and the buzzer should turn on and the HPA setting should flash on the LCD. To silence the alarm, hold the Alarm Silence button down for 3 seconds.
- To test the low pressure/breath delivery alarm, set the alarm to 5 cm H₂O. Open the patient outlet and the alarm/light will turn on in about 15 seconds.
- Turn off the gas supply and the low gas alarm/light will turn on and the pumps will automatically activate in one minute.

If problems are noted with this product, contact the Allied Healthcare Products, Inc. technical support center for assistance at 800-411-5136

The following is a sample log that may be used for recording test records during Yearly Verification of Calibration and Function.

Test Log

Test Date:

BPM	Acceptable Range	Reading
10	9 to 11	
12	10.8 to 13.2	
18	16.2 to 19.8	
20	18 to 22	
Tidal Volume 100% O2	Acceptable Range	
200	180 to 220	
400	360 to 440	
800	720 to 880	
1200	1080 to 1320	
Tidal Volume 100% Air	Acceptable Range	
200	180 to 220	
400	360 to 440	
800	720 to 880	
1200	1080 to 1320	
Tidal Volume 60% O2 (MCV100-B ONLY)	Acceptable Range	
200	176 to 224	
400	352 to 448	
800	704 to 896	
1200	1056 to 1344	
Pressure Relief High Pressure Alarm	NO higher than 60 cmH2O Light Buzzer	
High Airway Pressure Alarm	Light Buzzer	
Low Pressure Breath Delivery Alarm	Light Buzzer	
Low Source Gas	Light Buzzer	

14. Accessories and Replacement Parts:

Part Number	Description	Qty per Package
L599-180	3' Vent Circuit, with Swivel	10
L599-190	3' Vent Circuit, with swivel, exhalation filter	10
L599-130	3' Vent Circuit , with swivel, adult mask	10
L599-140	3' Vent Circuit, with swivel, adult mask, exhalation filter	10
L595161-10	Disposable Cuffed Oxygen Mask, Adult	10
L595162-10	Disposable Cuffed Oxygen Mask, Child	10
LPEEP	PEEP Valve	12
MCM-001	Three Channel Oxygen Manifold	1
MCH-001	10 Ft. Oxygen Manifold Extension	1
L270-220	Oxygen Regulator	1
MCV-115V-CORD	Replacement Power Cord w/ 115v plug	1
MCV-STRAP	Replacement Kit, Velcro Straps	2
L535026	Replacement Oxygen Hose 6ft W/ DISS	1
MCV-FILTER	Replacement Particle Filter	3

Velcro Hang Straps:

Two Velcro hang straps have been included with your MCV100. The Velcro straps can be used to hang the ventilator from a horizontal support such as a bed rail. To attach the straps, simply insert the end of the strap through the handle hinges with the Velcro side down (Fig 1), loop the strap around a horizontal support and through the white buckle, and affix the Velcro strap to itself. Two straps should be used when hanging the MCV100 as shown below (Fig 2).

Figure 1



Figure 1



NBR Hazardous Environment Filter (not included):

The air inlet fitting on the MCV100 has an internal 40 mm threaded connection per EN 148-1:1999. This is the standard thread connection for respiratory protective devices typically used by industry, law enforcement, and the military. This connection will accept air filters used in hazardous environments. To install, remove the air inlet screen and dust filter. The MCV100 will perform within manufacturer's specifications when used with filters that are in compliance with requirements as specified in NIOSH-42 CFR Part 84. Refer to filter manufacturer's specifications for gas type, filter life, and all other properties of the filter. Filter model FR-15-CBRN manufactured by 3M has been tested with this ventilator



Warning: Use of any filter with flow capacity of less than 40 LPM can degrade performance of the ventilator and may not provide filtration against the toxic environment for its intended use. Refer to manufacturer specifications for filter life.



Warning: Tighten filter in place securely to insure that the seal is air tight. Failure to tighten the filter may allow dangerous chemicals into the patient's lungs.

15.

Oxygen Cylinder Depletion Times:

These times are approximate and assume full cylinder capacity and .5 liters per minute usage for the pneumatic module. Always monitor the cylinder pressure and low pressure alarm to make sure you do not run out of oxygen.

**E Cylinder Capacity = 682 Liters Oxygen Capacity
(4.6 Liters Water Capacity)
Breaths per Minute**

Tidal Volume	8	9	10	12	14	15	18	20
1200	67	60	54	46	39	37		
1000	80	72	65	54	47	44		
800	98	88	80	67	58	54		
600	127	115	104	88	76	72	60	54
500	149	135	123	104	90	85	72	65
400	180	163	149	127	111	104	88	80
300	225	206	189	163	143	135	115	104
200	293	274	256	225	200	189	163	149

**Jumbo D Cylinder Capacity = 637 Liters Oxygen Capacity
 (4.0 Liters Water Capacity)
Breaths per Minute**

Tidal Volume	8	9	10	12	14	15	18	20
1200	63	56	51	43	37	34		
1000	75	67	61	51	44	41		
800	92	82	75	63	54	51		
600	119	107	97	82	71	67	56	51
500	139	126	115	97	85	79	67	61
400	168	152	139	119	104	97	82	75
300	210	192	177	152	134	126	107	97
200	274	256	239	210	187	177	152	139

**D Cylinder Capacity = 414.6 Liters Oxygen Capacity
(2.8 Liters Water Capacity)
Breaths per Minute**

Tidal Volume	Breaths per minute							
	8	9	10	12	14	15	18	20
1200	41	37	33	28	24	22		
1000	49	44	39	33	29	27		
800	60	54	49	41	35	33		
600	77	70	63	54	46	44	37	33
500	91	82	75	63	55	52	44	39
400	109	99	91	77	67	63	54	49
300	137	125	115	99	87	82	70	63
200	178	166	155	137	122	115	99	91

16. Approximate Tidal Volume settings based on Height:

APPROXIMATE SETTINGS BASED ON PATIENT HEIGHT

Tidal Volume (ml)	200	300	400	500	600	700	800	900	1000	1100	1200
Inspiratory Time (sec)	1	1.1	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2
Flow Rate (LPM)	12	16.4	20.0	23.1	25.7	28.0	30.0	31.8	33.3	34.7	36.0
8 BPM = I:E (1 TO -)	6.5	5.8	5.3	4.8	4.4	4.0	3.7	3.4	3.2	2.9	2.8
9 BPM = I:E (1 TO -)	5.7	5.1	4.6	4.1	3.8	3.4	3.2	2.9	2.7	2.5	2.3
10 BPM = I:E (1 TO -)	5.0	4.5	4.0	3.6	3.3	3.0	2.8	2.5	2.3	2.2	2.0
11 BPM = I:E (1 TO -)	4.5	4.0	3.5	3.2	2.9	2.6	2.4	2.2	2.0	1.9	1.7
12 BPM = I:E (1 TO -)	4.0	3.5	3.2	2.8	2.6	2.3	2.1	1.9	1.8	1.6	1.5
13 BPM = I:E (1 TO -)	3.6	3.2	2.8	2.6	2.3	2.1	1.9	1.7	1.6	1.4	1.3
14 BPM = I:E (1 TO -)	3.3	2.9	2.6	2.3	2.1	1.9	1.7	1.5	1.4	1.3	1.1
15 BPM = I:E (1 TO -)	3.0	2.6	2.3	2.1	1.9	1.7	1.5	1.4	1.2	1.1	1.0
16 BPM = I:E (1 TO -)	2.8	2.4	2.1	1.9	1.7	1.5	1.3	1.2	1.1	1.0	0.9
17 BPM = I:E (1 TO -)	2.5	2.2	1.9	1.7	1.5	1.4	1.2	1.1	1.0	0.9	0.8
18 BPM = I:E (1 TO -)	2.3	2.0	1.8	1.6	1.4	1.2	1.1	1.0	0.9	0.8	0.7
19 BPM = I:E (1 TO -)	2.2	1.9	1.6	1.4	1.3	1.1	1.0	0.9	0.8	0.7	0.6
20 BPM = I:E (1 TO -)	2.0	1.7	1.5	1.3	1.1	1.0	0.9	0.8	0.7	0.6	0.5
Height Male = ((IBW-50)/2.3)+60 inches @10 ml/Kg (cm)	47 (119.4)	51 (129.5)	56 (142.2)	60 (152.4)	64 (162.6)	69 (175.3)	73 (185.4)	77 (195.6)	82 (208.3)	86 (218.4)	90 (228.6)
Height Female = ((IBW-45.5)/2.3)+60 inches @10 ml/Kg (cm)	49 (124.5)	53 (134.6)	58 (147.3)	62 (157.5)	66 (167.6)	71 (180.3)	75 (190.5)	79 (200.7)	84 (213.4)	88 (223.5)	92 (233.7)
Ideal Body Weight Kg @10 ml/Kg	20.0	30.0	40.0	50.0	60.0	70.0	80.0	90.0	100.0	110.0	120.0

17. Warranty:

Limited One (1) Year Warranty

LSP warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of manufacture. This Warranty is expressly conditioned on compliance with all inspection and preventative maintenance requirements as set by applicable government agencies and as specified by LSP.

This Warranty is extended by LSP only to the first purchaser of this product from either LSP or from an authorized LSP distributor.

LSP'S OBLIGATIONS AND PURCHASER'S REMEDIES UNDER THIS WARRANTY ARE LIMITED AS FOLLOWS: In the event of a defect, malfunction or failure to conform to this Warranty, purchaser shall return this product to LSP, with shipping charges prepaid, within a reasonable time after discovery of such defect, malfunction or failure to conform. LSP shall repair or replace (at LSP's option) this product if it is defective, malfunctions or fails to conform to this Warranty, and shall return it to purchaser with shipping charges prepaid and without any additional charges due to costs of repair or replacement.

In the event the product returned by purchaser is not defective, has not malfunctioned and does conform to this Warranty, LSP shall not be obligated to repair or replace the product and shall not be obligated for shipping charges for return of the product to the purchaser.

LSP shall in no event be liable for any consequential damages, not for loss, damages or expenses directly or indirectly arising from the use of this product.

Disclaimer of Other Warranties

THIS WARRANTY IS IN PLACE AND IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A SPECIFIC PURPOSE, BY OPERATION OF LAW OR OTHERWISE.

This Warranty does not apply to malfunction or damage resulting from accident, alteration, misuse, abuse of the product, improper preventative maintenance, storage at extreme temperatures or extreme environments beyond design limits, or where appropriate, improper use of the product by untrained persons. This Warranty does not apply to any plastic or rubber components since they can be affected adversely by undue exposures to heat, sun, water, ozone, or to other deteriorate elements.

LSP has not authorized any other firm or person to make any representations concerning this product nor to assume on LSP's behalf any liability in any way connected with the sale or use of this product.

This Warranty becomes void immediately should any repairs of, or alternations to this warranted product be made without authorization by LSP.



Life Support Products
1720 Sublette Avenue
St. Louis, Missouri 63110-1968

18. Applicable Standards:

This equipment has been tested and found to comply with the EMC limits for the Medical Device Directive 93/42/ECN (EN 55011 and EN 60601-1-2). These limits are designed to provide reasonable protection against harmful interference in a typical medical installation. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with other devices, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving device*
- *Increase the separation between the equipment*

Consult the manufacturer or field service technician for help

The MCV 100 is intended to provide emergency respiratory support for children and adults. The product is intended to meet the following safety and performance standards:

Performance and Safety Requirements

- ASTM F920 – Performance and Safety Requirements for Resuscitators Intended for Use with Humans

Electrical Safety Requirements

- IEC 60601-1

Electromagnetic Compatibility

- IEC 60601-1,-2

Biocompatibility Requirements

- ISO 10993 – Physiochemical Tests for Plastics
- US Pharmacopeia – Class VI
- ISO 10993-1

Transport and Storage Requirements

- MIL-STD-810E – Shock, Vibration, and Storage Requirements
- IEC 60068-2-27 – Shock, Vibration, and Storage Requirements
- IEC 60068-2-6 – Shock, Vibration, and Storage Requirements
- IEC 60068-2-34 – Shock, Vibration, and Storage Requirements

The above listing of standards is not intended to be a complete listing of standards reviewed and tested during the development of this product. It may also not reflect latest versions as standards change. Allied Healthcare Products, Inc. regularly reviews the standards and updates the products to ensure compliance as necessary.

For the latest revision of the instruction manual, please refer to the company website at www.alliedhpi.com.

This manual is also available in other languages. Please call 314-771-2400 for more information on obtaining this manual in other languages.

S168-560-001 REV. B